GEOMETRIC FUTURE
Simply Cool Cooling

ESKIMO igloo 36

240mm LIQUID COOLER

Thank you for purchase of GEOMETRIC FUTURE ESKIMO igloo 36 Liquid CPU Cooler!
Please read this manual before your operation.

USER GUIDE

SPECIFICATIONS

GEOMETRIC FUTURE
ESKIMO igloo 36
240mm LIQUID COOLER

Model	Eskimo Igloo 36
Water Block Dimensions(L*W*H)mm	78 x 78 x 65
Thermal Compound	Nanolio cylinder type high thermal conductive silicone grease (Grease)
LINTEL CPU SOCKET SUPPORT	LGA1150/1151/1200/1366/1155/1151/1151/1200
LAMD CPU SOCKET SUPPORT	AMD2/2+/3/3+/AM2/AM2+/FM2
Cooler Color	Black
Tubes Material	Rubber with Nylon braided sleeve
LED Number	Controller Built in LED
Pump	External Pump
Pump Speed (+/-10% RPM)	4200
Bearing Type	Ceramic bearing
Noise Level (dBA)	< 30
Max Flow (L/min)	1.2
Input Voltage (V)	12
Input Currentbs (mA/A)	0.22
Rated Powerbs (Watt/W)	2.64
Mean Time Between Failure(h)	> 50000
Radiator	Space redential
Dimensions(L*W*H)mm	397 x 120 x 27 mm
Enclosure Technic	Painting/electroplating
Materials	Aluminum
Connectors	Aluminum Pagoda Shape Connectors

FAN	SQUIMA 2050B x 3
Dimensions(mm)	120 x 120 x 25
FAN Speed Rotor (+/-10% RPM)	2050
Noise Level (dBA)	29
Air Pressure (mmH2O)	2.70
Airflow (CFM)	69.5
LED Modes	Noise PWM control ARGB control
ARGB Rotted Voltage (V)	5
ARGB Rotted Current (A)	0.55
ARGB Rotted Power (W)	2.68
Motor Rotted Voltage (V)	12
Motor Rotted Current (A)	0.16
Motor Rotted Power (W)	1.92

PACKAGE CONTENT

GEOMETRIC FUTURE
ESKIMO igloo 36
240mm LIQUID COOLER

ESKIMO igloo 36



A. Intel Mounting Bracket x2
B. Fan x3
C. AMD Mounting Bracket x2
D. Intel CPU Backplate x1
E. Standoff Screws x4 (15x)

F. Standoff Screws x4 (15x)
G. Standoff Screws x4 (20x)
H. 360 Radiator x1
I. Standoff Screws x4 (T8x)
J. Standoff Screws x4 (AM5)

K. Fan Screws x12
L. Thermolicone Cap x4
M. Radiator Screws x12
N. PWM Cable x1
O. ARGB Cable x1

P. ARGB One-Click Controller x1
Q. Thermal Compound x1
R. Silicone grease spoon x1

HOW TO ASSEMBLE

GEOMETRIC FUTURE
ESKIMO igloo 36
240mm LIQUID COOLER

Install Fans

1. Install Fans to Radiator

2. Install Fan Screws

PH2 x12

Install the CPU Cooler

1. Remove the protect film from the cooler plate.
2. Apply the thermal compound on the CPU surface with correct quantity and uniformly spread. (optional)
3. Install the Mounting Bracket to your motherboard.
4. Install the Backplate
Remove the rubber handle rubber adhesive of the backplate and place it on the back of the motherboard. Make sure the rubber handle and the rubber adhesive are in place.
5. Install the Standoff Screws
Screw the standoff screws into the backplate and tighten them.
6. Install the Water Block
Place the water block on the CPU and then tighten it in the diagonal order.

Thermal Compound

Thermal Compound Spoon

AMD Mounting Bracket

Intel Mounting Bracket

AMD Mounting Bracket

Intel Mounting Bracket

Standoff screws

Mounting screws

Install Fans and Radiator combo to the PC chassis and tighten them

PH2 x12

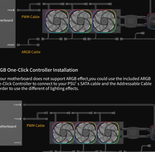

Installation Completion

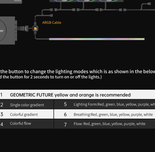

Connection Cables

Fans/ARGB Cable Connecting to the motherboard

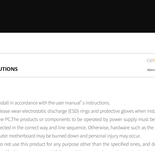

ARGB One-Click Controller Installation

If your motherboard does not support ARGB effect,you could use the included ARGB One-Click Controller to connect the PWM, SATA cable and the Addressable Cable in order to use the different of lighting effects.

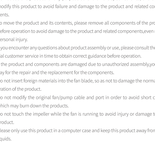

Tap the button to change the lighting modes which is as shown in the below. (Hold the button for 2 seconds to turn on or off the lights.)

1	GEOMETRIC FUTURE yellow and orange is recommended		
2	Single color gradient	5	Lighting Switches: green, red, yellow, purple, white
3	Colorful gradient	6	Breathing:red, green, blue, yellow, purple, white
4	Colorful flow	7	Flow: Red, green, blue, yellow, purple, white

PRECAUTIONS

GEOMETRIC FUTURE
ESKIMO igloo 36
240mm LIQUID COOLER

- Install in accordance with the user manual's instructions.
- Please wear electrostatic discharge (ESD) rings and protective gloves when installing the PC.The products or components to be operated by power supply must be connected in the correct way and line sequence. Otherwise, hardware such as the computer motherboard may be burned down and personal injury may occur.
- Do not use this product for any purpose other than the specified ones, and do not modify this product without authorization. Otherwise, the product and related components.
- To move the product and its contents, please remove all components of the product before operation to avoid damage to the product and related components,even more personal injury.
- If you encounter any questions about product,disassembly or use, please consult the official customer service in time to obtain correct guidance before operation.
- If the product and components are damaged due to unauthorized assembly,you will pay for the repair and the replacement for the components.
- Do not insert foreign materials into the fan blade, so as not to damage the normal operation of the product.
- Do not modify the original fan/pump cable and port in order to avoid short circuit which may burn down the products.
- Do not touch the impeller while the fan is running to avoid injury or damage to the product.
- Please only use this product in a computer case and keep this product away from any liquids.